


# Gothik Amps, Talon Build Drill Guides

11/10/2007

If you print the drill guides in this document with page-scaling turned off, then they will be to scale and may be directly affixed to the board for dilling. Note, the holes for the turrets are scaled for Keystone #1540-4 turrets, which tak a #33 drill bit (0.113 in.). If you are using different turrets than those, be sure to chose an appropriate drill bit.


Stph

# Talon Preamp Board Drill Guide

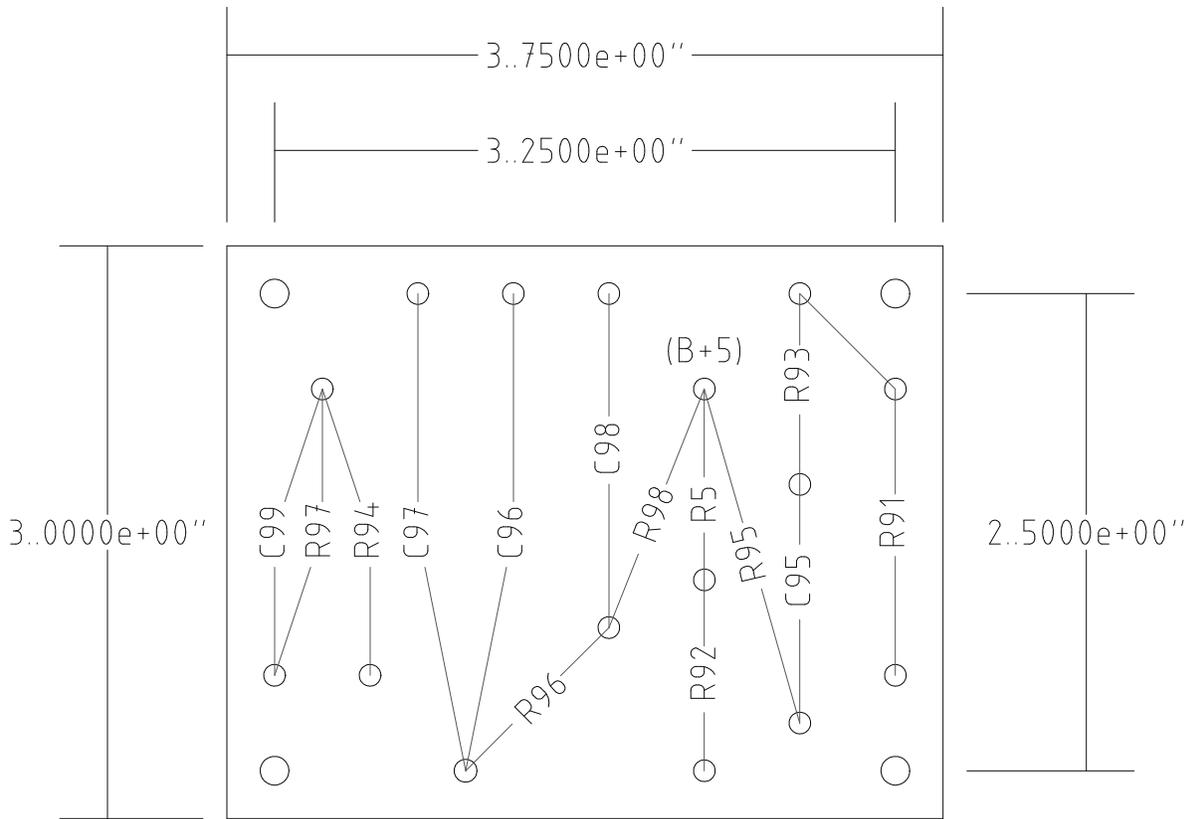


Board mounting holes use #25 (.1495")  
Turret mounting holes use #33 (.113")

# Talon Power Amp Board Drill Guide

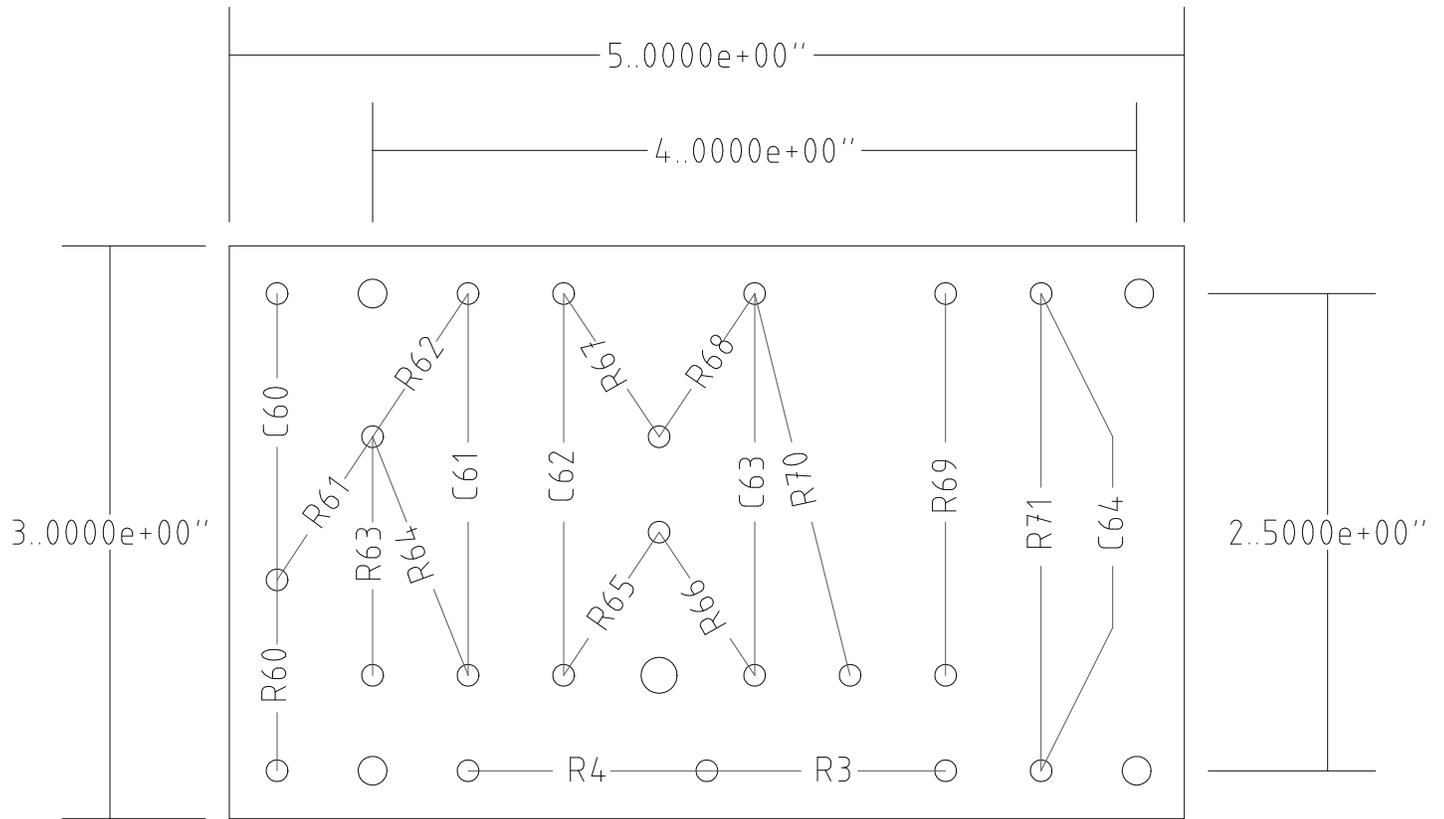

Board mounting holes use #25 (.1495")  
Turret mounting holes use #33 (.113")

# Talon Power Supply Board Drill Guide

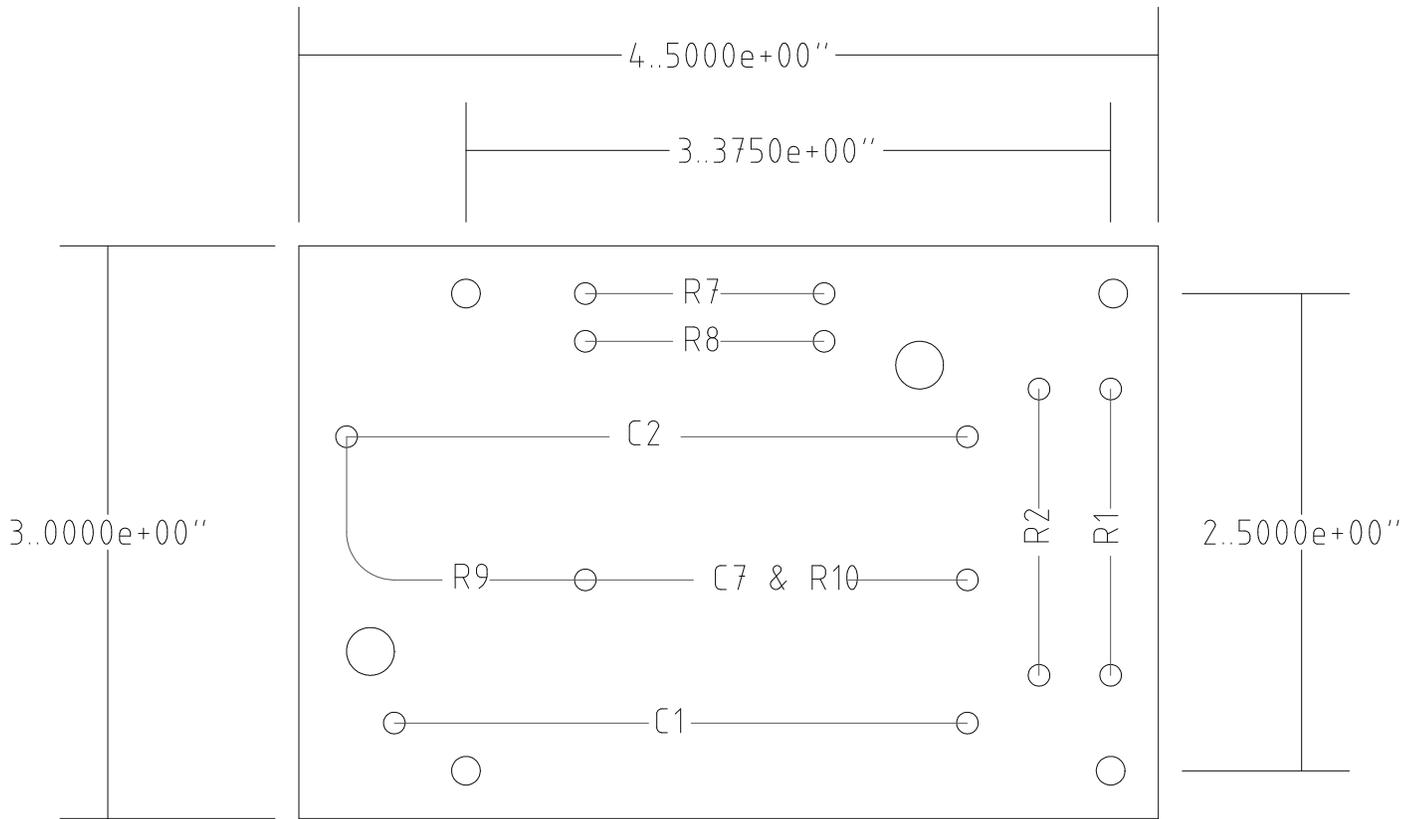

Board mounting holes use #25 (.1495")  
Turret mounting holes use #33 (.113")